




160 Cassell Road
Harleysville, PA 19438
484-991-8928
www.veritas-medicalsolutions.com



The Quality Management of Veritas Medical
Solutions is certified to ISO 9001:2015

VeriShield® Mevion S250 Cyclotron Vault & 25" Bi-Parting Door

Auburn University - Proton Radiation Testing Facility
Lot 4, Mark C. Smith Drive
Huntsville, Alabama 35801
United States of America

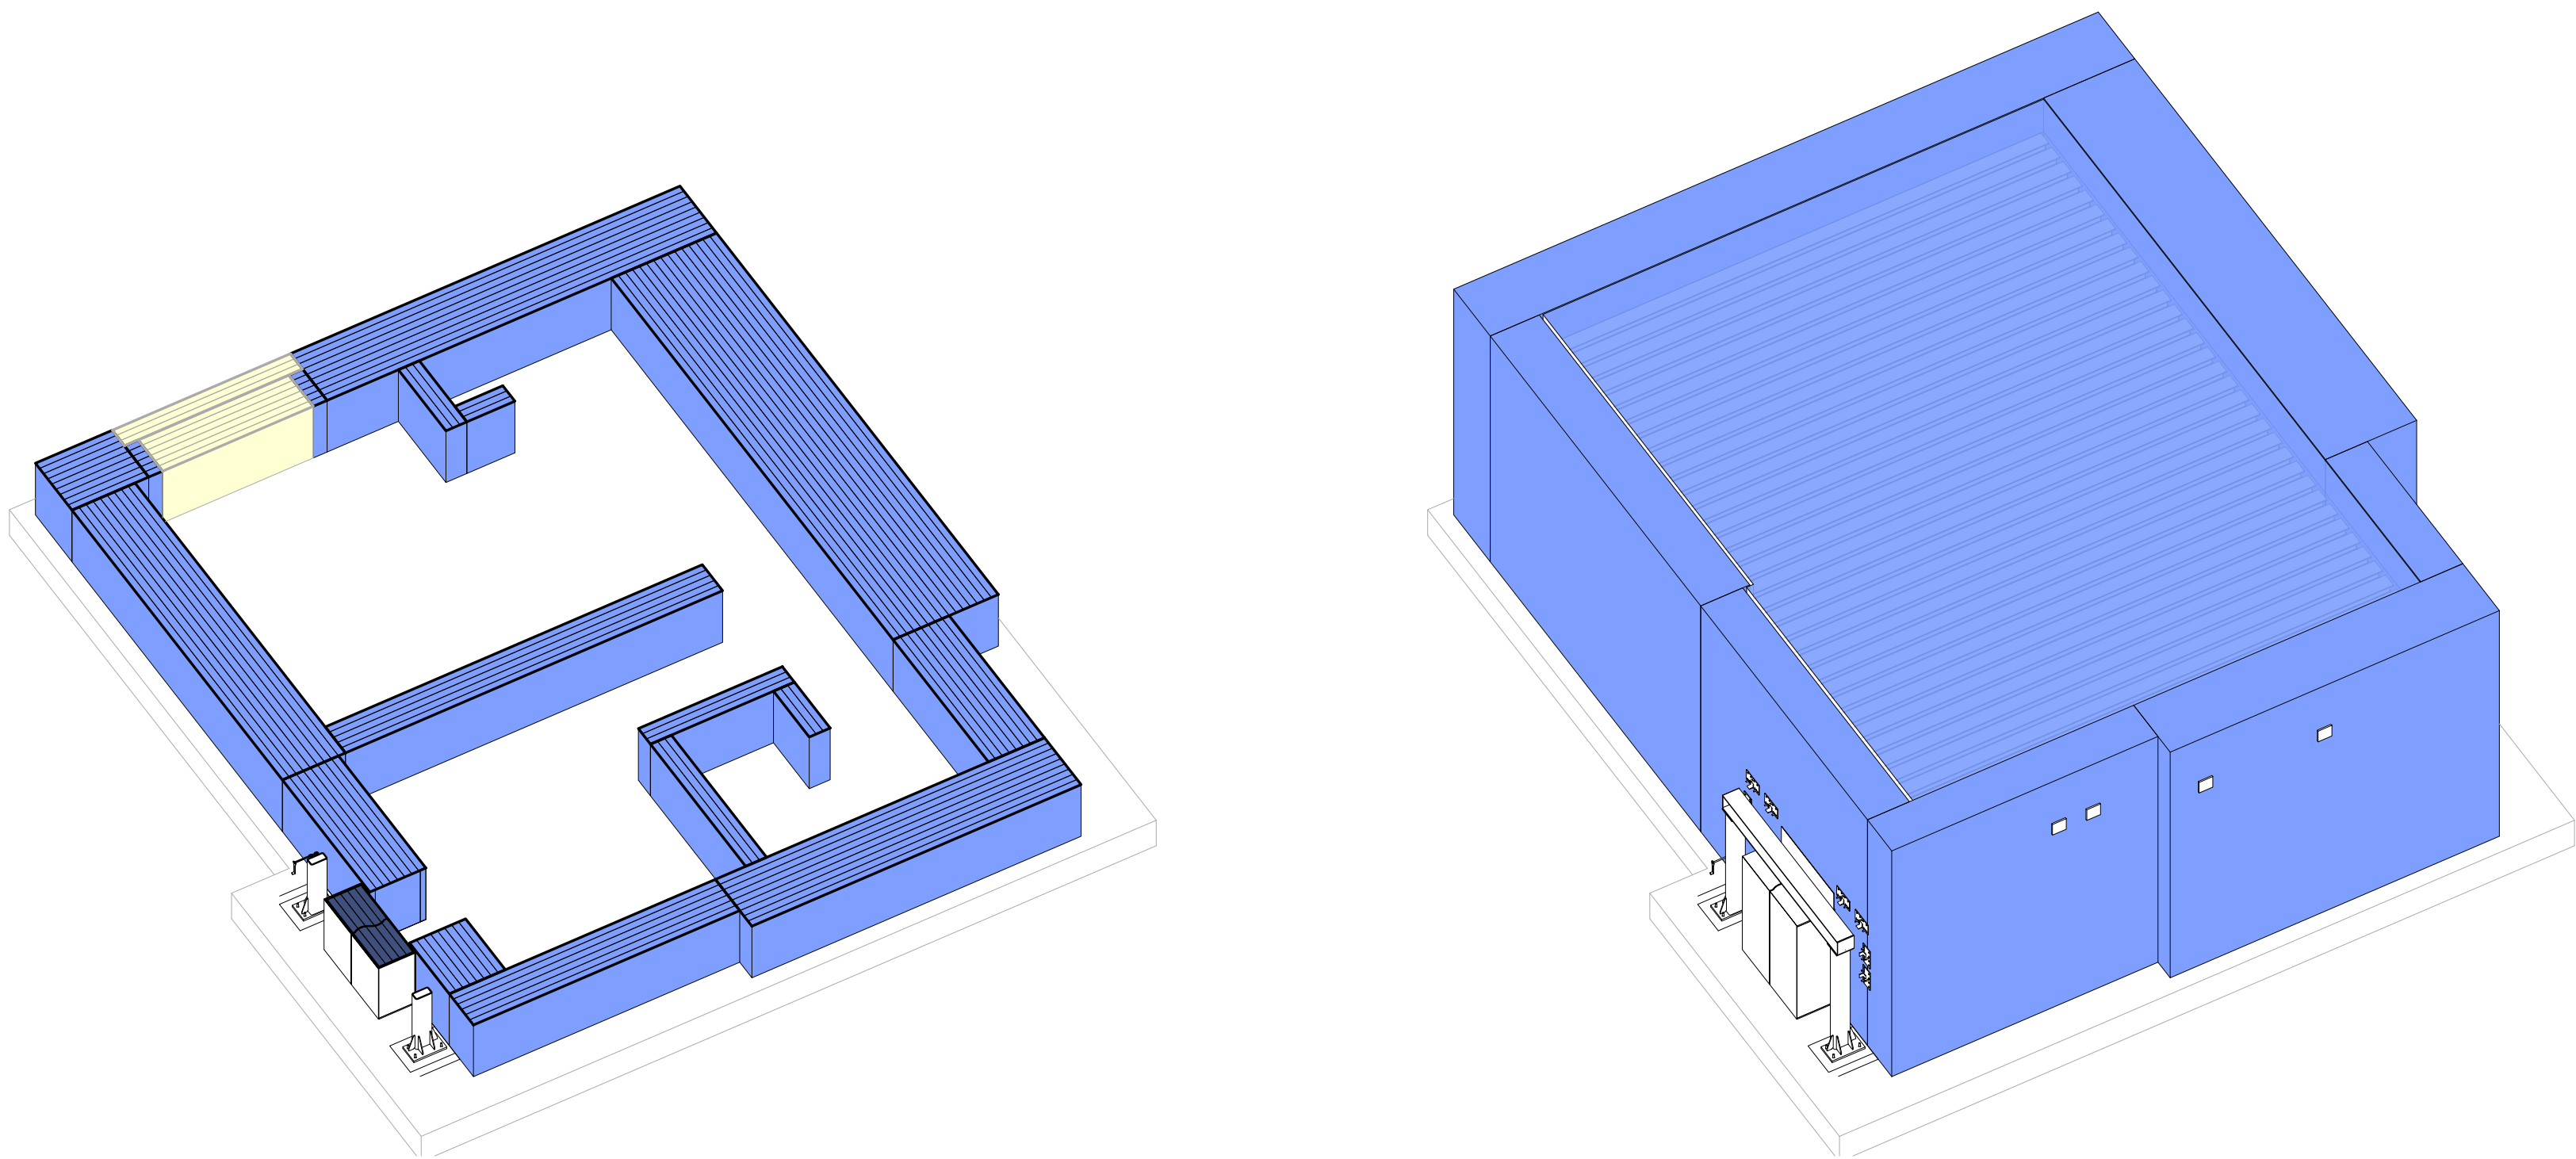

CONFIDENTIALITY NOTICE This message and any attachments contain confidential and proprietary information and are solely for the intended recipient. If you are not the intended recipient, any disclosure, copying, use, or distribution of information included in this message and any attachments is strictly prohibited. If you have received this communication in error, please notify us by replying via e-mail and immediately and permanently delete this message and any attachments. Thank you for your understanding.

CONDITIONS OF USE Attached files are for use in preparing planning, presentation, shop drawings, or related project specific material. Data in attached files is part of VERITAS' instruments of service and shall not be used, in whole or in part, by you or anyone else receiving this data through you or from you for any purpose other than preparing planning, presentation, shop drawings or related project specific material without express written consent from VERITAS. No sourcing, fabrication, installation, or construction is to be performed from the attached files. Attached files are not contract documents. Differences may exist between attached files and corresponding hard copy documents. VERITAS makes no representation regarding accuracy or completeness of attached files transmitted herein.

WHEN THIS DOCUMENT IT SUPPLIED TO EITHER OWNER OR CONTRACTOR, IN EITHER PAPER OR ELECTRONIC FORM, THE SUBSEQUENT USE OF THE INFORMATION CONTAINED ON THE DOCUMENT IS SUBJECT TO THE CONDITIONS OF THE AGREEMENT BETWEEN THE OWNER AND VERITAS AND TO VERITAS' COPYRIGHT AND OTHER SUCH RIGHTS IN THIS DOCUMENT. CONTRACTOR MAY MAKE ELECTRONIC FILES OF THIS DOCUMENT AVAILABLE TO SUBCONTRACTORS, SUBJECT TO THIS CONDITION OF USE, SOLELY AS A CONVENIENCE TO SUCH SUBCONTRACTORS IN THEIR PREPARATION OF SHOP DRAWINGS. THE PROVISION OF THIS DOCUMENT BY VERITAS SHALL NOT MAKE VERITAS RESPONSIBLE IN ANY WAY FOR ANY ASPECT OF THE SUBCONTRACTOR'S SHOP DRAWINGS, NOR RELIEVE SUBCONTRACTORS FROM FULL RESPONSIBILITY FOR PREPARATION OF THEIR REQUIRED SHOP DRAWINGS.

DRAWING INDEX			
Drawing Number	Drawing Title	Current Drawing Set / Milestone	Current Drawing Date
X-000	COVER SHEET	Review Set (DD 90%)	21 March 2025
X-100	CONTEXT PLAN	Review Set (DD 90%)	21 March 2025
X-110	WALL SHIELDING PLAN	Review Set (DD 90%)	21 March 2025
X-130	CEILING SHIELDING PLAN	Review Set (DD 90%)	21 March 2025
X-300	SECTIONS	Review Set (DD 90%)	21 March 2025
X-301	SECTIONS	Review Set (DD 90%)	21 March 2025
XS-001	GENERAL STRUCTURAL NOTES	Review Set (DD 90%)	21 March 2025
XS-100	PRELIMINARY LOADING PLAN	Review Set (DD 90%)	21 March 2025
XS-110	WALL REINFORCING PLAN	Review Set (DD 90%)	21 March 2025
XS-200	VAULT FRAMING PLAN	Review Set (DD 90%)	21 March 2025
XS-210	BEARING PLATE PLAN	Review Set (DD 90%)	21 March 2025
XS-300	STRUCTURAL DETAILS	Review Set (DD 90%)	21 March 2025
XS-500	STEEL DETAILS	Review Set (DD 90%)	21 March 2025
XS-515	STEEL DETAILS FRAMED DOOR OPENING	Review Set (DD 90%)	21 March 2025

SUPPORT DOCUMENT INDEX			
Drawing Number	Drawing Title	Current Drawing Set / Milestone	Current Drawing Date
BP-001	DOOR POWER & CONTROL DIAGRAM (BI-PART)	Provided with Layout Set	05 February 2025
BP-002	DOOR DEVICE DETAILS (BI-PART)	Provided with Layout Set	05 February 2025

REVIEW SET COORDINATION NOTES:			
COORDINATION ITEM:	PARTY:	COMMENT / ACTION ITEM:	
DOOR CONTROLS	(CLIENT/REP)	REVIEW:	DOOR POWER & CONTROL DIAGRAM PRELIMINARY DOOR CONTROL LOCATIONS PROVIDED WITH LAYOUT SET SEE SHEET: X-100
		COORDINATE:	FINAL DOOR CONTROL LOCATIONS WITH VERITAS
GENERAL MEP	(CLIENT/ REP)	NOTES:	INITIAL SERVICE ROUTES CAPTURED IN LAYOUT SET DISCUSSED DURING COORDINATION CALL ON 01/31/2025 (4) 4" I.D. SERVICE SLEEVES + TEST SLEEVE PROVIDED IN LAYOUT SET FOR REVIEW. REVIEW: NEW SERVICE ROUTES DISCUSS DURING RECENT COORDINATION CALL ON 03/18/2025 SEE SHEETS (X-110) & (XS-110) FOR PLACEMENT IN PLAN. SEE SECTIONS ON SHEET (X-300) FOR SLEEVE HEIGHTS. NEW SLEEVE QUANTITIES & NOTES: (5) 5" I.D. SLEEVES RESTING ON COURSE 29 IN [W1] WALL (5) 4" I.D. SLEEVES RESTING ON COURSE 26 IN [W1] WALL (1) 4" I.D. SLEEVE RESTING ON COURSE 29 IN [W7] WALL - (SPLIT SYSTEM) (1) 4" I.D. SLEEVE MID WALL ON DOUBLE 45 DEGREE ANGLE IN [W7] WALL - (TESTING PORT) LOW END ON EXTERIOR SIDE - PLEASE IDENTIFY APPROXIMATE DESIRED HEIGHT HIGH END ON INTERIOR SIDE (1) 4" I.D. SLEEVE RESTING ON COURSE 29 IN [W8] WALL
APPROVALS	(CLIENT/REP)	NOTE:	THIS REVIEW SET TO SERVE AS THE (DD 90%) DESIGN DEVELOPMENT DELIVERABLE OF THE VERITAS SCOPE OF WORK FOR THE DESIGN ONLY CONTRACT. PLEASE PROVIDE FEEDBACK FOR ANY CHANGES REQUIRED FOR FINAL APPROVAL. IF NO ADDITIONAL CHANGES ARE REQUIRED, PLEASE EXPRESS WRITTEN APPROVAL THAT THE DESIGN SOLUTION IS ACCEPTABLE AND THE TEAM IS READY TO ADVANCE TO THE FULL BUILD & CD (CONSTRUCTION DOC.) PHASE, UNDER SEPARATE CONTRACT.

SEAL



CONDITIONS OF USE

WHEN THIS DOCUMENT IS SUPPLIED TO EITHER OWNER OR CONTRACTOR, IN EITHER PAPER OR ELECTRONIC FORM, THE SUBSEQUENT USE OF THE INFORMATION CONTAINED ON THE DOCUMENT IS SUBJECT TO THE CONDITIONS OF THE AGREEMENT BETWEEN THE OWNER AND VERITAS AND TO VERITAS' COPYRIGHT AND OTHER SUCH RIGHTS IN THIS DOCUMENT. CONTRACTOR MAY MAKE ELECTRONIC FILES OF THIS DOCUMENT AVAILABLE TO SUBCONTRACTORS IN THEIR PREPARATION OF SHOP DRAWINGS. THE PROVISION OF THIS DOCUMENT BY VERITAS SHALL NOT MAKE VERITAS RESPONSIBLE IN ANY WAY FOR ANY ASPECT OF THE SUBCONTRACTORS SHOP DRAWINGS, NOR RELIEVE SUBCONTRACTORS FROM FULL RESPONSIBILITY FOR PREPARATION OF THEIR REQUIRED SHOP DRAWINGS.

VeriShield Mevion S250 Cyclotron Vault & 25" Bi-Parting Door
Auburn University - Proton Radiation Testing Facility
Lot 4, Mark C. Smith Drive
Huntsville, Alabama 35801
United States of America

DRAWING ISSUE LOG

#	ISSUE TITLE	Date
	Layout Set	02/05/2025
	Review Set	03/21/2025

VERITAS PROJECT TEAM

SALES REP:	Greg Shearer
PHYSICIST:	El Hassane Bentefour
DESIGNER:	Jay DiRaimondo
PROJECT MANAGER:	Susan Heid

VERITAS PROJECT INFORMATION

PROJECT #	24-136-5195
PROSPECT #	5195-01
PHYSICS REPORT:	
SHIELDED DOOR(S):	BP25 (3060-501)
MACHINE:	Mevion S250
MACHINE ENERGY:	

DRAWING TITLE

COVER SHEET

DRAWING NUMBER

X-000


Review Set - 03/21/2025

NOT FOR CONSTRUCTION

VERITAS PHYSICS & DESIGN ONLY ESTIMATE # 5195-01
VERITAS PHYSICS & DESIGN ONLY PROJECT# 24-136-5195

VERITAS FULL BUILD ESTIMATE # xxxx-xx
VERITAS FULL BUILD PROJECT# xx-xxx-xxxx

PRELIMINARY - NOT FOR CONSTRUCTION

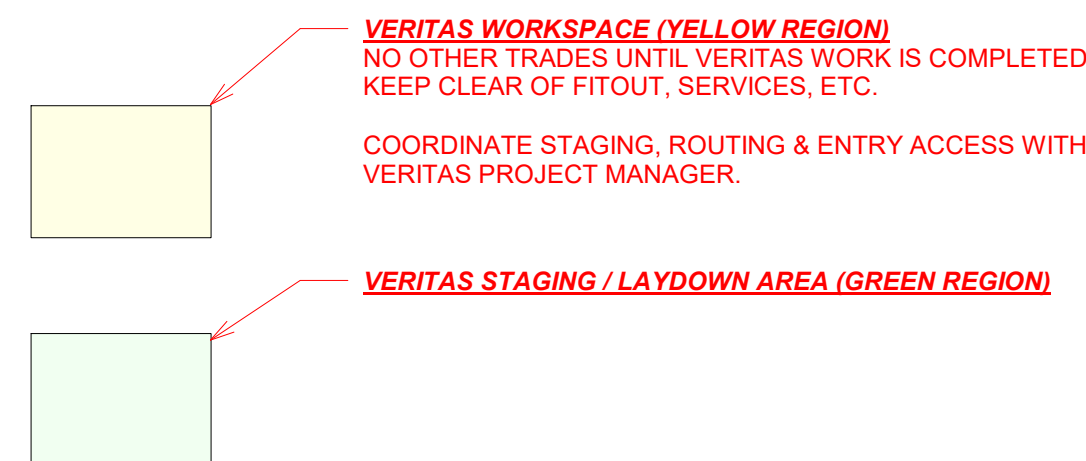


A	DOOR CONTROL CABINET. PREFERABLY LOCATED WITHIN SIGHT OF DOORS
C	[HM] TOUCH SCREEN - LOCATE AT / NEAR TREATMENT ROOM ENTRANCE <u>(OUTSIDE OF SAFETY SENSOR FIELD)</u>
D1	[PBOS] PUSH BUTTON OP. STATION - LOCATE NEAR CONTROL DESK - IN CONTROL ROOM.
D2	[PBOS] IN ROOM - KEYED, AWAY FROM DOOR, NOT IN PRIMARY BEAM PATH
E1, E2, & F	INTERLOCK SWITCHES & SAFETY SENSORS LOCATED IN DOOR CAVITY & FINISHED DOOR OPENING.
HAND CRANK	HAND CRANK CAN BE LOCATED ON EITHER POST. ACCESS IS REQUIRED, RECOMMENDED: 2'-6" x 7'-0" DOOR (BY OTHERS)

- OVERALL SHIELDING BARRIER THICKNESS DIMENSIONS REFLECTED IN VERITAS DRAWINGS TO INCLUDE 1/8" (3mm) SPACE BETWEEN LAYERS TO ACCOUNT FOR THIS ANTICIPATED GROWTH.

X-100

PRELIMINARY - NOT FOR CONSTRUCTION

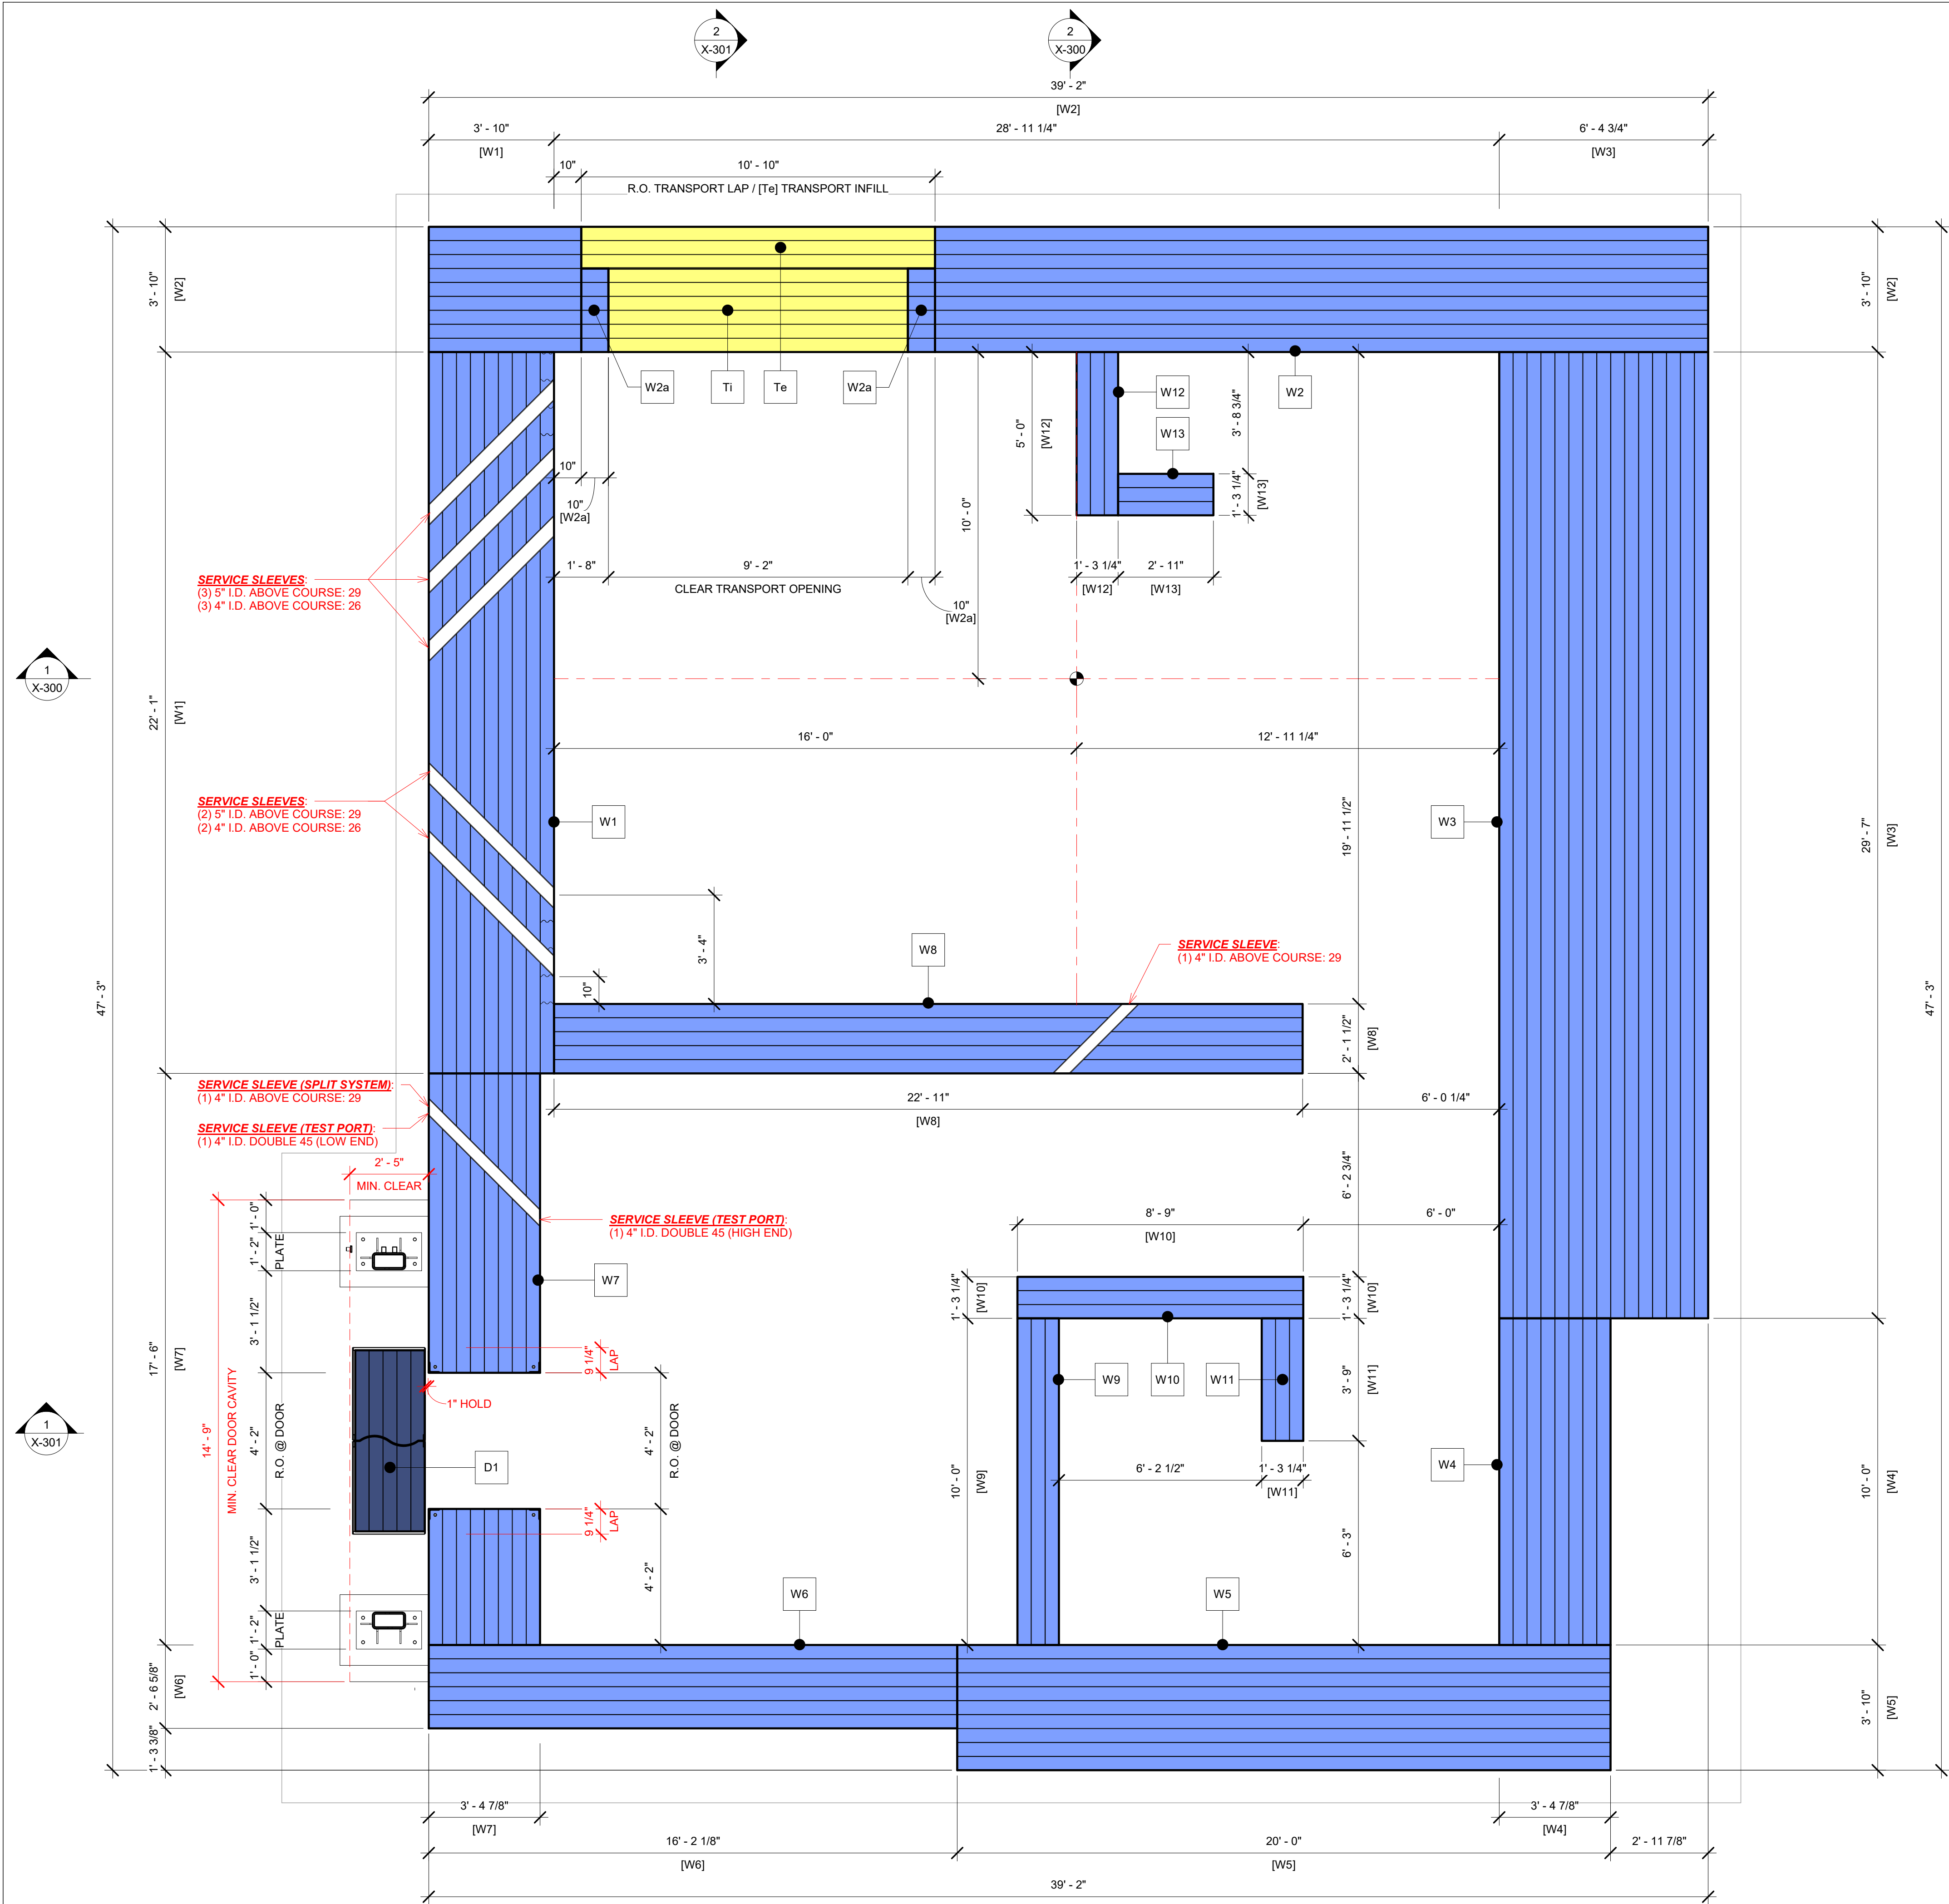

1 Wall Shielding Plan
3/8" = 1'-0"

Wall Shield Schedule		
Shielding Region P1 - P12	Type - Layers	Comments
D1	V300 - 5	Shielding in Door Shell
Te	V220 - 3	Transport Opening Infill - 3 Exterior Layers
Ti	V220 - 6	Transport Opening Infill - 6 Interior Layers
W1	V220 - 9 Bearing	
W2	V220 - 9	
W2a	V220 - 6	Transport Opening Laps
W3	V220 - 15 Bearing	
W4	V220 - 8 Bearing	
W5	V220 - 9	
W6	V220 - 6	
W7	V220 - 8 Bearing	
W8	V220 - 5	
W9	V220 - 3	
W10	V220 - 3	
W11	V220 - 3	
W12	V220 - 3	
W13	V220 - 3	

- SLIDING & BI-PARTING DOOR CAVITY NOTES:**
- FLOOR SLAB CONDITIONS:**
- SLAB REINFORCING / FOUNDATION WORK BY OTHERS
REFER TO SHEET XS-100 FOR DOOR LOAD INFORMATION.
 - RECOMMENDED SLAB THICKNESS BELOW DOOR BASE PLATES: 24" (610mm)
REQUIRED MINIMUM SLAB BELOW DOOR BASE PLATES: 18" (457mm)
TYPICAL MIN. DOOR ANCHOR EMBED: 12" (305mm)

* PLEASE COORDINATE LOCATION SLAB REINFORCING OUTSIDE OF BASE PLATE FOOTPRINT TO PREVENT DAMAGE TO REBAR OR DELAYS TO INSTALLATION.
 - FINISHED TREATMENT LEVEL FLOOR SLAB CONDITION MUST BE FLAT / LEVEL WITH A TOLERANCE NOT TO EXCEED 1/8" OVERALL WITHIN THE DOOR CAVITY.
 - DOOR FINISH CAVITY BY OTHERS.
MINIMUM CAVITY SIZE REQUIREMENTS VARY PER DOOR TYPE & MODEL.
ACCESS IS REQUIRED ON ONE SIDE FOR HAND CRANK & SERVICE.
* RECOMMENDATION: A 2'-6" (762mm) x 7'-0" (2134mm) ACCESS DOOR.
ACCESS IS REQUIRED ABOVE CEILING ALONG THE FRONT OF DOOR SUPPORT BEAM.
* RECOMMENDATION: UTILIZE REMOVABLE CEILING TILES (ACT) OR PROVIDE ACCESS PANELS

SEAL

veritas
Medical Solutions
160 CASSELL RD.
HARLEYSVILLE, PA 19438
(484) 991-8928

CONDITIONS OF USE

WHEN THIS DOCUMENT IS SUPPLIED TO EITHER OWNER OR CONTRACTOR, IN EITHER PAPER OR ELECTRONIC FORM, THE SUBSEQUENT USE OF THE INFORMATION CONTAINED ON THE DOCUMENT IS SUBJECT TO THE CONDITIONS OF THE AGREEMENT BETWEEN THE OWNER AND VERITAS AND TO VERITAS COPYRIGHT AND OTHER SUCH RIGHTS IN THIS DOCUMENT. CONTRACTOR MAY MAKE ELECTRONIC FILES OF THIS DOCUMENT AVAILABLE TO SUBCONTRACTORS IN THEIR PREPARATION OF SHOP DRAWINGS. THE PROVISION OF THIS DOCUMENT BY VERITAS SHALL NOT MAKE VERITAS RESPONSIBLE IN ANY WAY FOR ANY ASPECT OF THE SUBCONTRACTORS SHOP DRAWINGS, NOR RELIEVE SUBCONTRACTORS FROM FULL RESPONSIBILITY FOR PREPARATION OF THEIR REQUIRED SHOP DRAWINGS.

VeriShield Mevion S250 Cyclotron Vault & 25" Bi-Parting Door
Auburn University - Proton Radiation Testing Facility
Lot 4, Mark C. Smith Drive
Huntsville, Alabama 35801
United States of America

DRAWING ISSUE LOG		
#	ISSUE TITLE	Date
1	Layout Set	02/05/2025
2	Review Set	03/21/2025

VERITAS PROJECT TEAM	
SALES REP:	Greg Shearer
PHYSICIST:	El Hassane Bentefour
DESIGNER:	Jay DiRaimondo
PROJECT MANAGER:	Susan Heid
VERITAS PROJECT INFORMATION	
PROJECT #	24-136-5195
PROSPECT #	5195-01
PHYSICS REPORT:	
SHIELDED DOOR(S):	BP25 (3060-501)
MACHINE:	Mevion S250
MACHINE ENERGY:	
DRAWING TITLE	
WALL SHIELDING PLAN	
DRAWING NUMBER	
X-110	

PRELIMINARY - NOT FOR CONSTRUCTION